

User's Guide

Version 1.1



Lamp Monitoring System

Model LM100 Version 1.1

Solar Light Company, Inc.

© 2000 Solar Light Company. All rights reserved.

100 East Glenside Avenue
Glenside, PA 19038
USA

Tel: (215) 517-8700
Fax: (215) 517-8747

info@solarlight.com
www.solarlight.com

Document Number: LM01

Contents

INTRODUCTION	5
SUPPORTED DETECTORS	5
FEATURES	5
GETTING STARTED	6
INSTALLATION	6
POWER SUPPLY	7
CONTROL INTERFACE	8
FRONT PANEL	8
DISPLAY	
BUTTONS	
LIGHTS	
REAR PANEL	9
SETUP	11
CALIBRATION	11
WARNING THRESHOLD	11
ERROR THRESHOLD	11
EXTERNAL POWER RELAYS	12
DATA COLLECTION	12

TECHNICAL SPECIFICATIONS**13****TABLE OF FIGURES****14****INDEX****15**

Introduction

A UV lamp monitor can reduce maintenance costs by determining exactly when lamps need to be serviced. The LM100 continuously monitors relative lamp output from 0% to 100%. It provides a cost-effective and trouble-free method of determining exactly when lamps need to be removed for cleaning.

Supported Detectors

The LM100 was specifically designed to monitor output from Solar Light Co.'s UW254 submersible germicidal probe but will accept output from any 4 to 20mA detector (two wire).

Features

- Warning and Error threshold alarms
- AC or DC power input
- Power relays for external warning devices
- Simple 0 to 100% output display
- Easy one-step calibration
- Colored indicator lights
- Large 0.56" LED display

GETTING STARTED

Installation

The LM100 utilizes a standard 1/8 DIN enclosure. Mounting is as follows:

1. In your panel, cut a hole to the dimensions specified in Figure 1.
2. Unscrew thumbscrews from rear panel and remove side rails. See Figure 2.
3. Place the LM100 in the hole you've just cut.
4. Replace side rails and tighten thumbscrews.

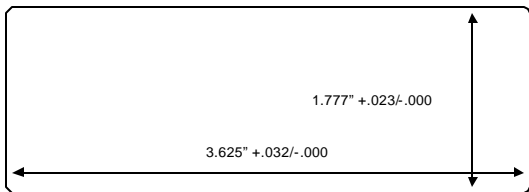


Figure 1. Panel cutout dimensions.

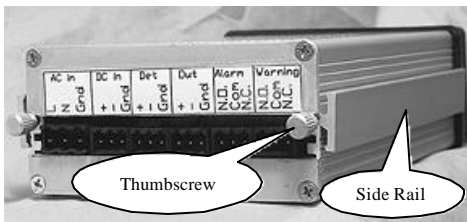


Figure 2. Rear view of LM100.

Power Supply

The LM100 can be powered by 110/220 Vac or 12 to 24 Vdc. The default configuration for AC is 110 Vac. Jumper JP6 on the main board must be changed to power the LM100 by 220 Vac. See the instructions below to change JP6. No adjustments are needed for DC power. See Figure 5 and Table 1 for more on wiring.

To change the configuration of JP6, follow the steps below:

1. Disconnect the power to the LM100 and all connectors from the rear panel.
2. Unscrew the two screws from the front panel of the meter.
3. Slide the board out of the case.
4. Set JP6 for the desired voltage. See Figure 3.
5. Replace the board, screws, connectors, and reconnect the power.

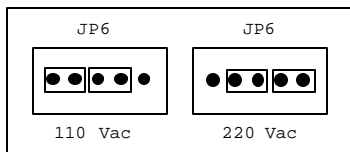


Figure 3. JP6 on main board.

Control Interface

Front Panel

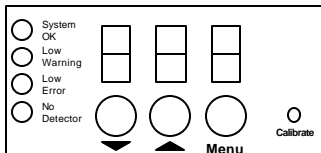


Figure 4. Front Panel.

Display

The 3-digit display indicates the % output of the detector when in normal mode and displays the warning or error thresholds when setting them. The warning threshold is generally the higher of the two but each can be set to any value between 0 - 150%.

Buttons

The UP, DOWN, and MENU buttons located below the display are used to set the warning and error threshold values. The recessed CALIBRATE button is used to calibrate the meter.

Lights

- System OK -- Indicates that the LM100 has power and is operational
- Low Warning -- Turned on when output falls below the warning threshold
- Low Error -- Turned on when output falls below the error threshold
- No Detector -- Indicates that no detector is connected (input < 4 mA)

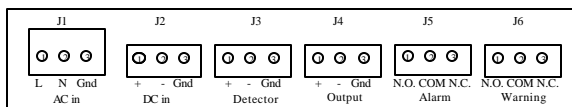
Rear Panel**Figure 5. Rear Panel.**

Table 1. Rear panel connector descriptions.

Connector	Description
J1	Accepts power from either a 110 or 220 Vac source. Jumper JP6 on the main board must be adjusted to switch between 110 and 220 Vac. See Figure 3.
1	AC line connection (no connection for DC operation)
2	AC neutral connection (no connection for DC operation)
3	Earth ground
J2	Accepts power from a 12 to 24 Vdc source. No adjustments are required.
1	DC + input (no connection for AC operation)
2	DC – input (no connection for AC operation)
3	Earth ground
J3	Accepts analog input from a 4 to 20 mA detector.
1	Detector + input
2	Detector – input
3	Detector shield (Earth Ground)
J4	Outputs a 4 to 20 mA scaled analog signal where 4 mA (20 mA) = 0% (100%) for external data storage.
1	4 – 20mA + output
2	4 – 20mA – output
3	Earth ground
J5	10A 125 Vac form C relay. Contacts 1,2 are enabled while contacts 2,3 are disabled when the detector output falls below the warning threshold, connecting or disconnecting power respectively to an external warning device.
1	Alarm normally open relay contact
2	Alarm common relay contact
3	Alarm normally closed relay contact
J6	10A 125 Vac form C relay. Contacts 1,2 are enabled while contacts 2,3 are disabled when the detector output falls below the error threshold, connecting or disconnecting power respectively to an external warning device.
1	Warning normally open relay contact
2	Warning common relay contact
3	Warning normally closed relay contact

Setup

Calibration

Calibrating the meter sets the current detector output level to 100%. To calibrate the meter, do the following:


1. Expose the detector to clean lamps.
2. With a pointed object, press the recessed CALIBRATE button.



Warning threshold

To set the warning threshold follow these steps:


1. Press the MENU button. The display should read "L01".
2. Press the MENU button again.
3. Press the UP or DOWN button until the display reads the desired value.
4. Press the MENU button.

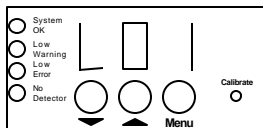

Error threshold

To set the error threshold follow these steps:

1. Press the MENU button.
2. Press the UP button. The display should read "L02".
3. Press the MENU button.
4. Press the UP or DOWN button until the display reads the desired value.
5. Press the MENU button.

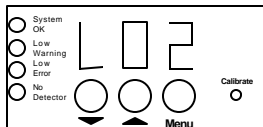

External power relays

See Figure 6 to connect your external warning devices to the external power relays.

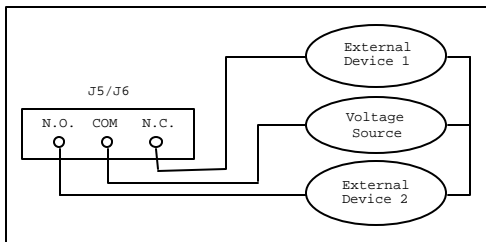


Figure 6. Wiring diagram for external power relays.

- External device 1 turns OFF with alarm.
- External device 2 turns ON with alarm.
- Voltage source is an external AC or DC power source.

Data collection

See Figure 7 to connect your data storage device to the 4 to 20mA analog output.

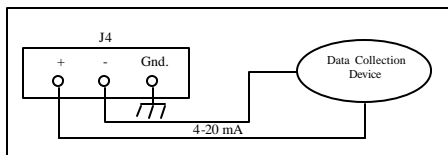


Figure 7. Wiring diagram for data collection device.

Technical Specifications

Power Requirements Vac Vdc Current	110 / 220 volts 12 – 24 volts 0.4 A
Max detector current input	40 mA
Max current output (4-20 mA)	40 mA
Dimensions L W H	7.0 in (17.8 cm) 3.9 in (9.9 cm) 1.9 in (47.3 cm)
Weight	1 lb. 6 oz.
Case Material	Clear anodized aluminum
Display resolution	1%
Accuracy	± 0.1%
Range	0 – 150%
Relay Contacts	10 A 125 Vac (6 A 250 Vac) Form C

Table of Figures

<i>Figure 1. Panel cutout dimensions.</i>	6
<i>Figure 2. Rear view of LM100.</i>	6
<i>Figure 3. JP6 on main board.</i>	7
<i>Figure 4. Front Panel.</i>	8
<i>Figure 5. Rear Panel.</i>	9
<i>Figure 6. Wiring diagram for external power relays.</i>	12
<i>Figure 7. Wiring diagram for data collection device.</i>	12

Index

- Buttons, 8
 - CALIBRATE, 8, 11
 - DOWN, 8, 11
 - MENU, 8, 11
 - UP, 8, 11
- Calibration, 11
- Connectors, 10
 - J1, 10
 - J2, 10
 - J3, 10
 - J4, 10
 - J5, 10
 - J6, 10
- Data collection, 12
- Detectors, 5
- dimensions, 6
- display, 5, 8, 11
- Display, 8
- error threshold, 8, 10, 11
- Error threshold, 5, 11
- Features, 5
- Installation, 6
- Introduction, 5
- jumper, 7, 10
 - JP6, 7, 10
- lamps, 5, 11
- Lights, 8
 - Low Error, 8
 - Low Warning, 8
 - No Detector, 8
 - System OK, 8
- output level, 11
- power relays, 12
- Power Supply, 7
- Rear Panel, 9
- Setup, 11
- side rails, 6
- Specifications, 13
- thumbscrews, 6
- UW254, 5
- warning devices, 5, 12
- warning threshold, 8, 10, 11
- Warning threshold, 11

